


architectural hardware

V4035 TURN & RELEASE

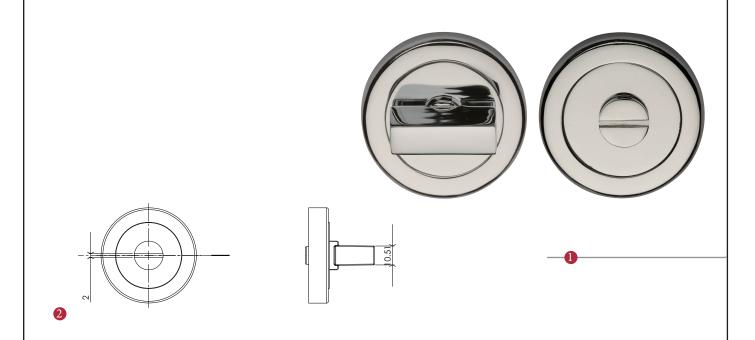

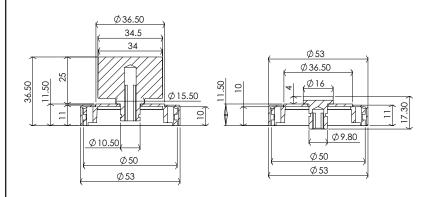

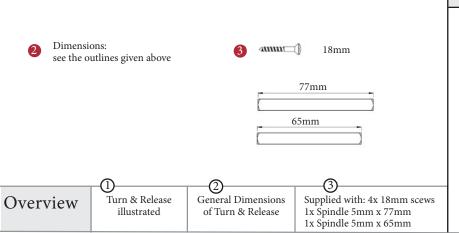

FITTING

- Insert the required length of spindle through the lock or deadbolt
- Holding the centre of the turn or release, lift off the outer ring, which reveals the screw fixing
- Take the slotted release button side, position on the outside of the door and push assembly onto the spindle end so the assembly is flush with the doors surface.
- Making sure that the assembly is central, and the spindle is horizontal, mark the screw hole positions, make a pilot hole, and fix into place with woodscrews.
- Repeat for the turn side on the inside of the door, make sure the spindle locates within the turn and test operation.
- On some installations you may need to shorten the spindle slightly by cutting with a hacksaw to allow the turn assembly to sit flush on the door.

M Marcus Ltd., Dudley

Product Code	Material
V4035	Solid Brass


Available in all Heritage Brass finishes.


Sizes shown are in mm and approximate. We reserve the right to amend where necessary and without any prior notice.

architectural hardware

V860 299 INTERIOR LETTERFLAP



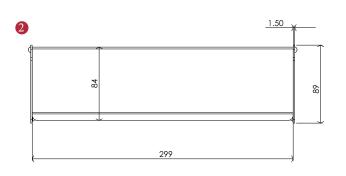





FITTING

- Dimensions: see the outlines given above
- 3 amm
- 12.5mm
- Position Letterflap over aperture in door to determine the optimum position for fixing.
- Having determined Letterflap position, mark out where screws will be affixed though the two [left-side/right-side] brackets (as illustrated above), and secure the first bracket in place, ensuring that the mounting nub is uppermost and facing inward (towards the apperture to be covered).
- 3 Slide the Letterflap onto the mounting nub of the now affixed bracket, and then slide the second bracket onto the other other end of the Letterflap, and now afix that bracket where you have previously marked to secure the Latterflap firmly in place. Test.

Overview

Interior Letterflap illustrated

General Dimensions of Interior Letterflap Supplied with: 4x 12.5mm scew

M Marcus Ltd., Dudley

Product Code	Material
V860 299	Solid Brass

Available in all Heritage Brass finishes.

Sizes shown are in mm and approximate. We reserve the right to amend where necessary and without any prior notice.