

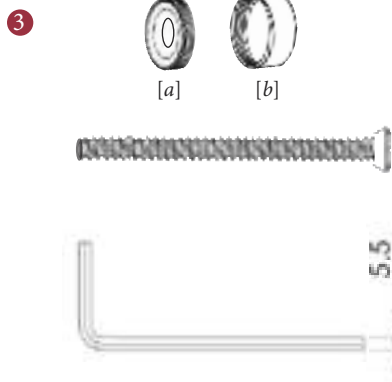


V890 CENTRE DOOR KNOB (External door hardware)

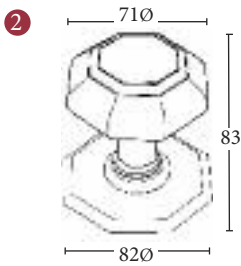

1

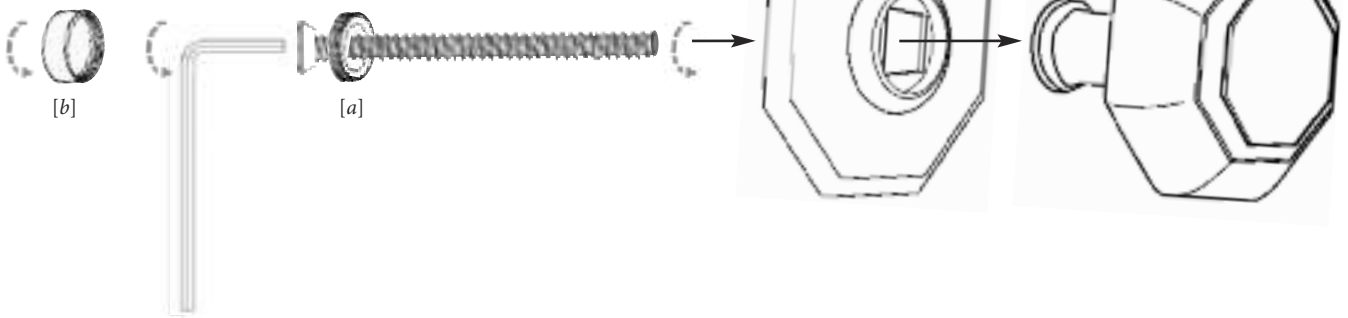

FITTING

- 1 Position Centre Knob assembly centrally on door and determine where to drill fixing hole.
- 2 Drill a 5mm hole through the door.
- 3 Taking the Allen bolt, place the threaded washer over it and secure the assembly to the door using the Allen key.
- 4 Secure over the threaded washer the threaded [decorative] cap provided.
- 5 Tighten and test

Overview

1 Door Knob with fixings illustrated

2 (General dimensions of Door Knob)

3 Supplied with:
 1x Allen key
 1x threaded Allen bolt
 1x threaded washer [a]
 1x decorative cap [b]

M Marcus Ltd., Dudley

Material	Date	Product Code	Description	Sizes shown are in mm and approximate. We reserve the right to amend where necessary and without any prior notice.
Solid Forged Brass	10 Sept 2019	V890	Centre Door Knob	